



INSTALLATION INSTRUCTIONS

Components List:


- BM-TWP Ball Check Valve Jets
- MANI-SD-A Security Device
- MAN-A-4-AC Manifold
- Silver SLS+ Variable Speed Blower

63" Phineas

Freestanding Air Tub With Overflow

Install blower behind a wall (with an access panel) or in a closet. Blower can also be installed under floor. Ensure the Security device, MANI-SD-A, is at least 2" above the bottom of overflow hole. Security device and hose can be mounted in wall.

Installation shown is typical.

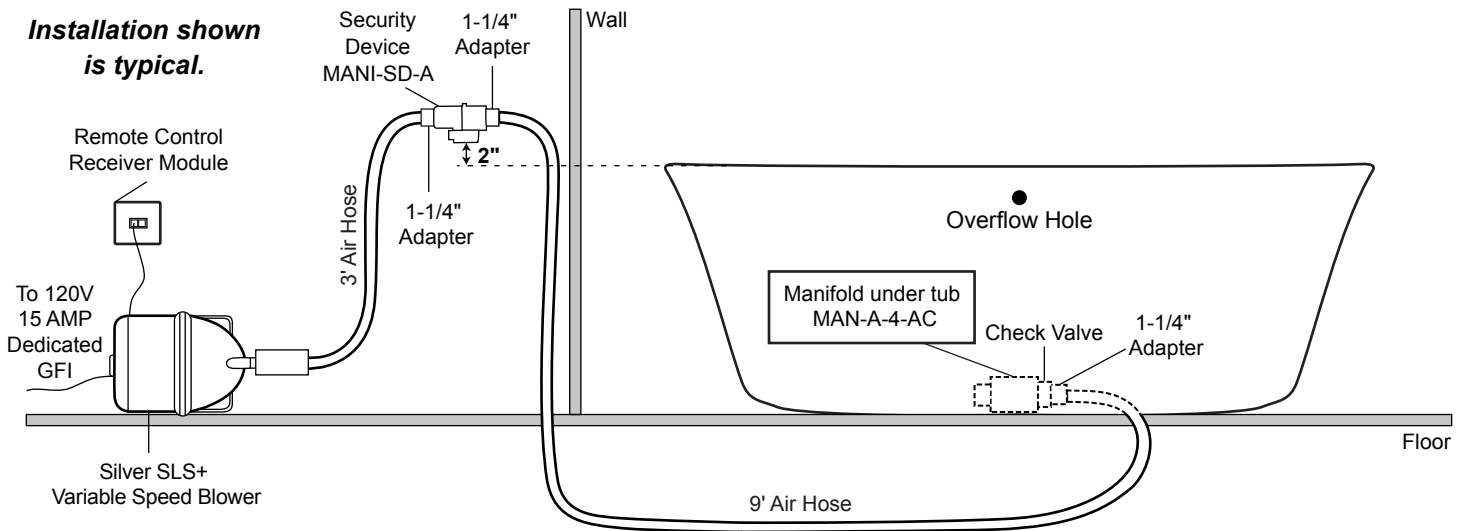

INSIDE OF BATH TUB

Features:

- (12) Maxi Air Jets with 24 openings




Elbows for air jets Tees for air jets

- Remote Control CG+/RTC-SENSOR-WP



12-15 year battery life

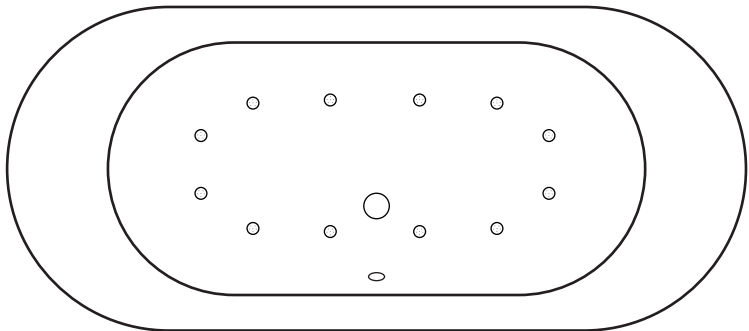



INSTALLATION INSTRUCTIONS

Components List:


- BM-TWP Ball Check Valve Jets
- MANI-SD-A Security Device
- MAN-A-4-AC Manifold
- Silver SLS+ Variable Speed Blower

63" Phineas

Freestanding Air Tub Without Overflow

Install blower behind a wall (with an access panel) or in a closet. Blower can also be installed under floor. Ensure the Security device, MANI-SD-A, is at least 2" above the tub rim. Security device and hose can be mounted in wall.

Installation shown is typical.

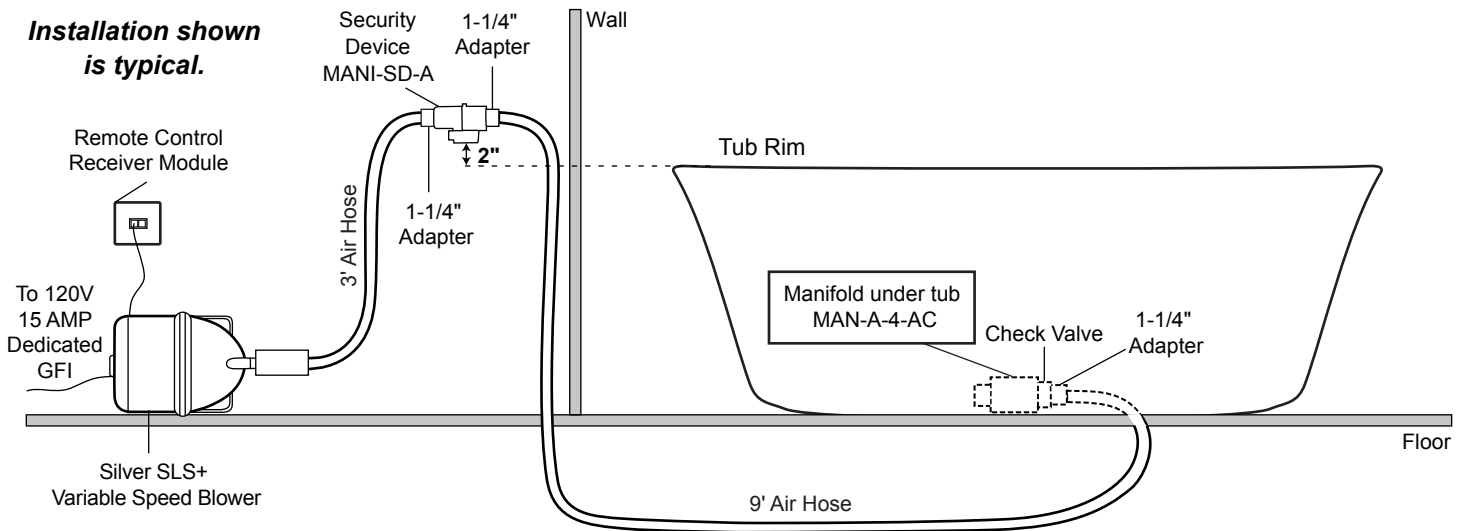

INSIDE OF BATH TUB

Features:

- (12) Maxi Air Jets with 24 openings




Elbows for air jets Tees for air jets

- Remote Control CG+/RTC-SENSOR-WP



12-15 year battery life

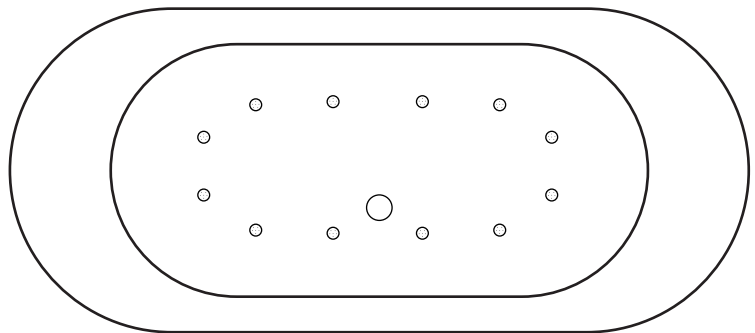



SPECIFICATIONS

Overall Dimensions	63" L x 28-3/8" W (front to back) x 21-3/8" H
Water Capacity	
without overflow	55 gallons
with overflow	40 gallons
Water Depth	
to top of tub	16-1/2" H
to overflow	12" H
Tub Weight Uncrated	62 lbs.
Tub Footprint	49" L x 22" W (front to back)
Faucet Configurations	No Faucet Drilling

63" Phineas

Freestanding Tub

All measurements are approximate. Measurements may vary +/- 1/2".

