



## DOUBLE OFFSET TUB SUPPLY

### INSTALLATION INSTRUCTIONS

Before you begin, read the installation instructions below. Observe all local plumbing and building codes. For the following installation instructions for your new tub supplies it is assumed that the water supply lines are in place and directly accessible for installation.

Unpack and inspect for any shipping damages. If you find any damages, do not install. Contact Customer Service at 1-866-855-2284. If you need assistance while installing your tub supplies, call our Customer Service number.

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing. Signature Hardware accepts no liability for any damages to the floor, walls, plumbing or personal injury during installation.

### PARTS LIST:

- |                           |                           |   |
|---------------------------|---------------------------|---|
| A. (2) Rubber Cone Washer | D. (2) Compression Nut    | G. (2) Straight Stop Valve - 1/2" IPS x 1/2" OD |
| B. (2) Slip Nut           | E. (2) Friction Washer    | H. (2) 1/2" NPT Nipple                          |
| C. (2) Supply Tube        | F. (2) Rubber Cone Washer | I. (2) Bell Flange                              |

### TOOLS AND MATERIALS:

- |                   |                |
|-------------------|----------------|
| Adjustable Wrench | Plumber's Tape |
| Damp Cloth        | Thread Sealant |

### INSTALLATION

1. Slide the slip nuts (**B**) up the supply tubes (**C**). Place the rubber cone washers (**A**) on the top of the supply tubes.
2. Place thread sealant or plumber's tape on the copper or threaded pipes at the finished floor. Thread the pipe nipples (**H**) onto the copper or threaded pipes. Slide the bell flanges (**I**) over the pipe nipples and press the into place.
3. Apply thread sealant to the pipe nipples and attach the straight stop valves (**G**). Wipe away any excess sealant with a damp cloth. Allow sealant to cure for 24 hours before use.
4. Slide the compression nuts (**D**) onto the supply tubes (**C**).
5. Slide the friction washers (**E**) and rubber cone washers (**F**) onto the supply tubes.
6. Place the supply tubes into the straight stop valves and tighten the compression nuts.
7. Close the straight stop valves and briefly turn on the main water supply to check for leaks. If leakage occurs, tighten the connections with an adjustable wrench as necessary. If problems persist, contact Customer Service.
8. Install the tub faucet according to the faucet installation instructions.

